 



# THE RIDGID® QUICKCHANGE SYSTEM™

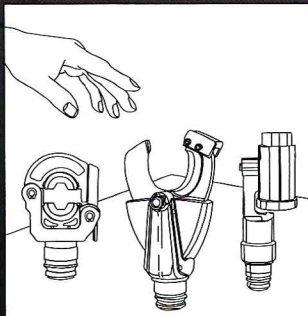

## HOW IT WORKS:



 
1. Select the appropriate interchangeable head for the job.

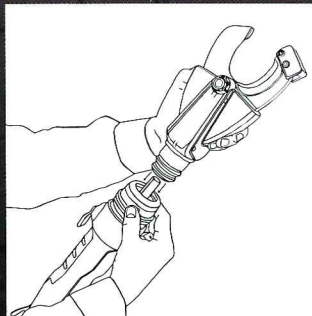

2. Pull back on QCS™ collar and insert the head; release the collar until it clicks into place.



 3. Complete the job — cut, crimp or punch.

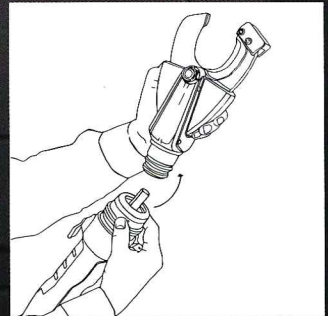

4. Remove the head by pulling the QCS™ collar toward the base of the tool.